


Setup the camera from a Smartphone/Tablet

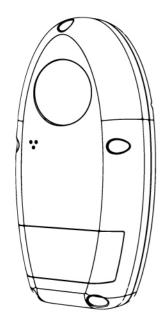


Supported Smart phone system version

- iOS iPhone \ iPad
 Requires iOS 6.0 or later
- Android Smart phone \ Tablet
 Requires Android 4.0 or Later


Download the mCamView2 user manual here http://www.starvedia.com/download.html



A Face this QR code 10cm away to the camera, wait until the three LEDs change to flashing at the same time.

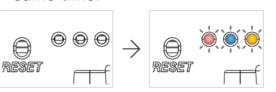

S Wait until the red LED is constantly on(not blinking)

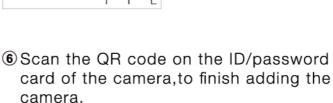



STEP 1 Download the mCamView2 APP






mCamView2

Scan the QR code to download the software "mCamView2" from App Store for iPhone/iPad or from Android Market for Android devices.

STEP 2 Power on the Camera

Connect the Power Adapter to the Camera.

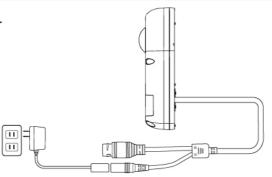


STEP 3-1 LTE Setup With Mobile




Open the App mCamView2, tap the "+" icon to add the camera, choose "LTE setup" to setup the camera with LTE connection.



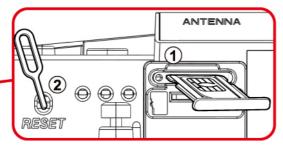

- ① Insert the SIM card into the camera,
- ② press the reset button, check if the three LEDs are flashing.



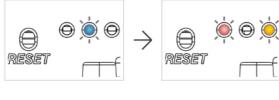

③ Key in the PIN and APN code of the SIM card on the App to generate the QR code


STEP 4 Log in to the Camera


Tap the Camera icon to log in to the camera.


The default administration account is "admin",
the default administration password is empty (leave blank).

After logged in, tap the camera icon to play the live video.

* Notice: there are two passwords for the camera, one is the administration password, the other one is the video play password. The default video-play password is "ipcam" (lowercase).

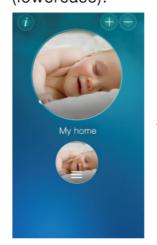

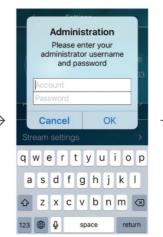

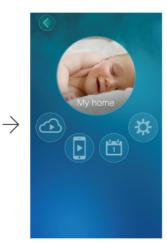

STEP 5 SD Card Recording * Class 10 micro SD is prerequisite

- a Insert the SD card into the camera, the yellow LED on the camera will be blinking.
- b The SD card will start to do the recording once the alarm notification is triggered. The camera will do 5 second pre-recording to prevent the loss of the important starting moment
- To enable the continuous SD card recording, please enable it inside the camera settings.
- d To playback the recorded video, tap the on the App and choose the "SD Card" and date/time to do the playback.








Quick Installation Guide



Setup the camera from a computer

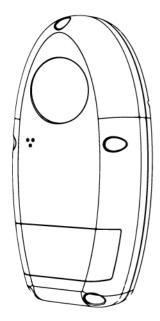

Computer system version


- Windows Requires Windows XP or later
- MAC OS Requires Mac OS 10.7 or later

Download the CamView user manual here http://www.starvedia.com/download.html




STEP 4 LTE Setup

- (1) Please insert the SIM card into the LTE Camera.
- (2) From the CamView, right click the icon of the camera to browse the camera web page.
- ③ Go to Network settings → LTE Settings, key in all the SIM card information, click "Save & Apply" button.
- Refresh the web page and wait until the "Sim Status" has changed to "Ready". Click "LTE Test" button to start LTE connection testing.

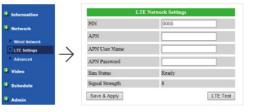


When the test result is "Internet connected", unplug the Ethernet cable. Wait until the blue LED is on.

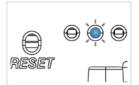

Now, you could see the Video from your CamView software through LTE connection.

Power on the Camera

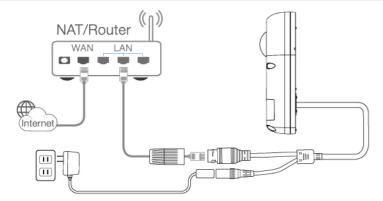

Connect the Power Adapter to the Camera and connect the Ethernet cable.

STEP 5 SD Card Recording * Class 10 micro SD is prerequisite



Enable SD card recording.

→ SD Card Record Settings on the Web configuration page. Then select "schedule recording" and the SD card recording will be operational right after saving.



SD Card Playback. Right Click on the selected camera on the camera list, then choose the SD card playback.

Install CamView Software STEP 2

Please download the latest CamView software at this address: http://www.starvedia.com/download.html

After the setup menu pops up, select "Install Management Software" and follow the instructions.



FAQs

What should I do if I have forgotten the password or the ID/Password card is missing? Ans Please press the Reset button for five seconds. The camera will reset to the factory default settings. The default video-play password is ipcam (lowercase).

What should I do if I cannot see the video remotely?

Ans The red LED of the camera should be remain on when the camera is connected to the Internet. If the red LED is blinking, please double check the network connection and settings again.

[Q3] I can see the video from a remote location, but the video quality is not satisfying and sometimes the video disconnects and reconnects by itself.

Ans It's probably due to the poor Internet bandwidth (internet speed), which might be not good enough.

You may try to apply for a better Internet connection from your Internet Service Provider or reduce the bandwidth setting of the camera.

What is the default admin user name/password?

Ans Default admin user name: admin

Default admin password

Where to download the latest camView software?


Please refer to the following website to download the latest CamView software. www.starvedia.com/download.html

See The Video STEP 3



The CamView software will list the searched camera on the "Auto search"

Drag the camera from the "Auto Search" section to the "Camera List" section.

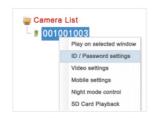

Right click the camera on the camera list and choose the ID/Password Settings.



Key-in the password given on the ID/Password Card and you will be able to see the video.

Package Contents



Ethernet Cable



Open Ejector Pin







SIM Card Tray

Rubber Stoppe





Product View

